



Example of a fully filled seven point multipoint thermocouple. cross section showing all of the MI cables.

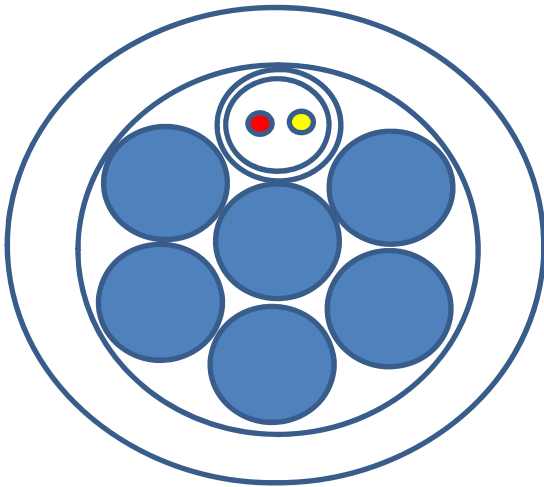

Cross section showing six filler wires and one remaining MI cable.

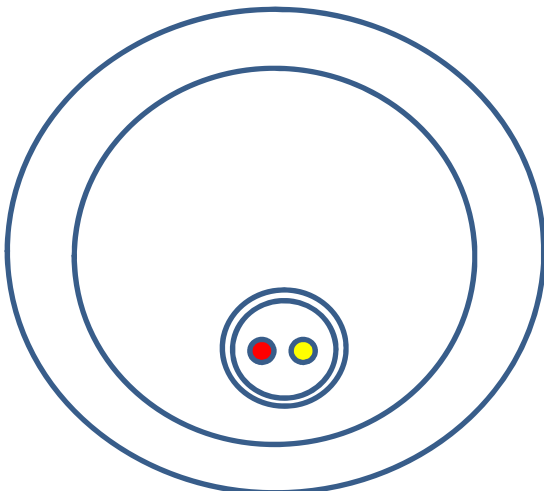

Conventional design multipoint that is not fully filled. Note: The thermocouples at the end may not be in contact with the sheath which will slow down the response time. This type multipoint should only be used in an application where measuring temperature change is not critical to the operation.